Automatic Smart Door Lock Manual



Preparation word

Full automatic: for the first use, please first charge the battery, put it in the battery box, close the battery cover, and the smart lock will enter the standby state.

Going to the Main Menu

Turn on the touch screen and press "* #" and then to enter the main menu or press the SET button on the rear lock plate. To enter the main menu, you must enter the administrator information to verify. After entering the main menu, the voice prompt "Please press the number key to select next set", the user can press the corresponding number key to select the operation according to the menu number.

Enter the Main Menu

Turn on the touch screen and press "*" and "#" enter the main menu. Firstly, you need to add an administrator and enter information (fingerprint/assword/ard) then enter the master password ,fingerprint or IC card , after the press the "#". The administrator availability is five, and the first five inputs are identified as administrator information. And enter the menu again to verify the administrator information.

- (1) New User
- (2) Delete User
- (3) System Set
- (4) Install Set
- (5) Record

1. New User

Add administrator information (Availability: 5:Password/fingerprint/card), enter the information twice, and then the voice prompt adds successfully. Press * key to exit.

Add User information: Enter five administrator informations before adding user information (Password/fingerprint/card), enter the information twice, and then the voice prompt adds successfully. Press * key to exit.

2. Delete User

Press the button:Delete user, voice broadcast:please input number, press # to confirm (for example 002 #)

Success delete —continuous add press * key to exit.

3. System Set

- (1) Time & Date \rightarrow Enter Date
- (2) Volume \rightarrow volume+/volume-
- (3) Verify Mode \rightarrow single verify / double verify
- (4) Language \rightarrow Chinese/English

4. Install Set

- (1) Direction \rightarrow Set Left / Set Right
- (2) Lock Type \rightarrow Not Push / Push
- (3) Auto Lock \rightarrow Autolock ON / Autolock OFF
- (4) Auto Lock Threshold

5. Wifi Connection

Turn on the touch screen and press **"1" and "#"** to connect with Wifi.

Steps: Press "1 #" → Open Usmart Go APP to Add Device → Connect hotspot WIFI (Cloud

Home-~) in Wifi Setting on your Phone → Connect Wifi on Usmart Go APP (wait a few seconds) → Success → Press doorbell key(#) to request to unlock.

1. Download Usmart Go App on Google Play.



2. Add Device (press "1 #" and open app)



3. Connect with WIFI Could Home-

<	WLAN				< Select Wi-Fi	Manual input	Connecting network
					10 hotspots are found around.	Rescan	Checking network Remaining waiting 56 seconds.
WLAN					Choose your WiFi hotspot	8 🔶	
						⊕ 奈	
✓ CloudHome-296D537AF4 令)				ChinaNet-GTkD	8 🗢		
			\bigcirc	DIRECT-e8-Pantum P2200 Series	8 🗢		
					tcl_AC_t*ap_42DA98_TCLKT-ZS	8 🗢	
Ch	oose a network			\odot	ChinaNet-yx2Q	⊕ ∻	
	doubwin	8	(((•		HUAWEI-ZJ3SYB_HILInk	⊕ ÷	
	doubwin 50	А		0	jiacheng_ext	8 ÷	
	doubwin_56		Ŧ	Ø	chunhe	⊕ ÷	
	ChinaNet-GTkD	8	(((+	\odot	Jiacheng	8 🗢	
	DIRECT-e8-Pantum	8	(((•	\odot	Please use manual input if there isn't y the list.	your Wi-Fi on	



6. One-key Unlocking and Doorb

Press doorbell key once, the device will make doorbell calls 2 – 3 times. Press locking key once, the device will lock automatically.

7. Locking Key and Unlocking Key

Press unlocking key once, the device will unlock automatically. Press locking key once, the device will lock automatically.

8. Battery Connector

To connect battery with device. Please be noticed that only customized battery can be used; otherwise, dangers might be occurred.

9. Factory reset

Use a thin needle to press the hole in the middle of the automatic lock button for 5 seconds to restore the factory settings.

